





Remove all bottom panel screws

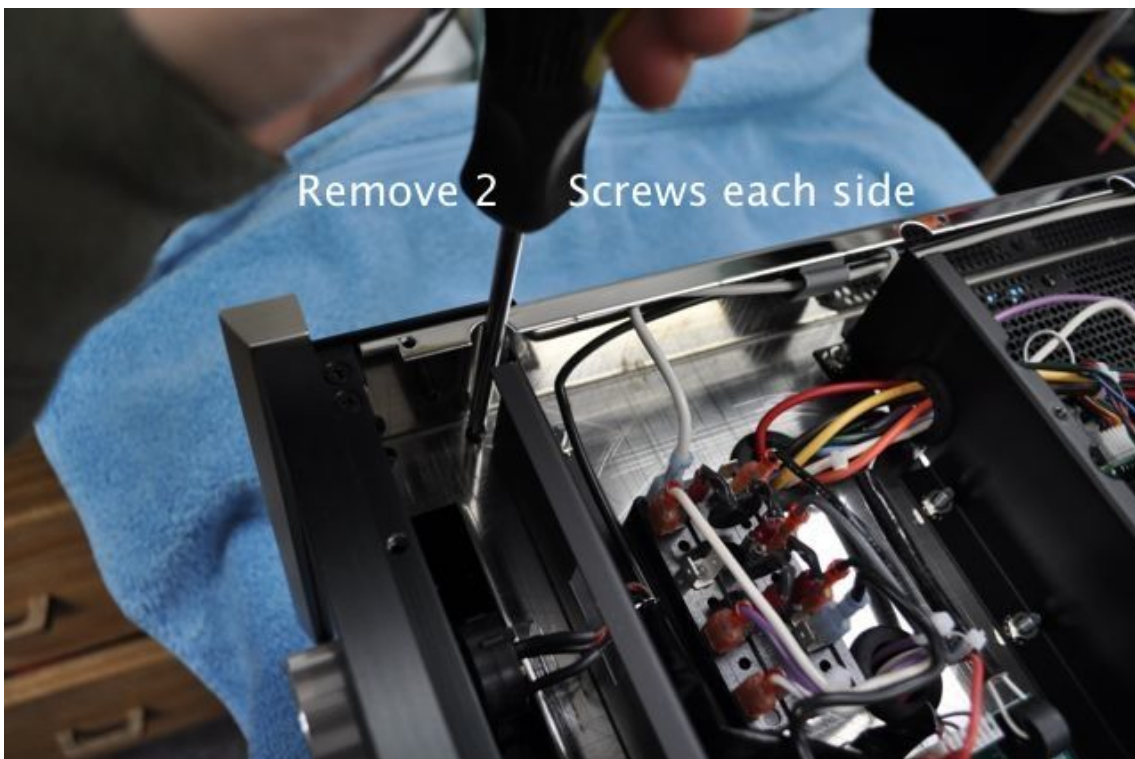


Remove 2 Screws each side





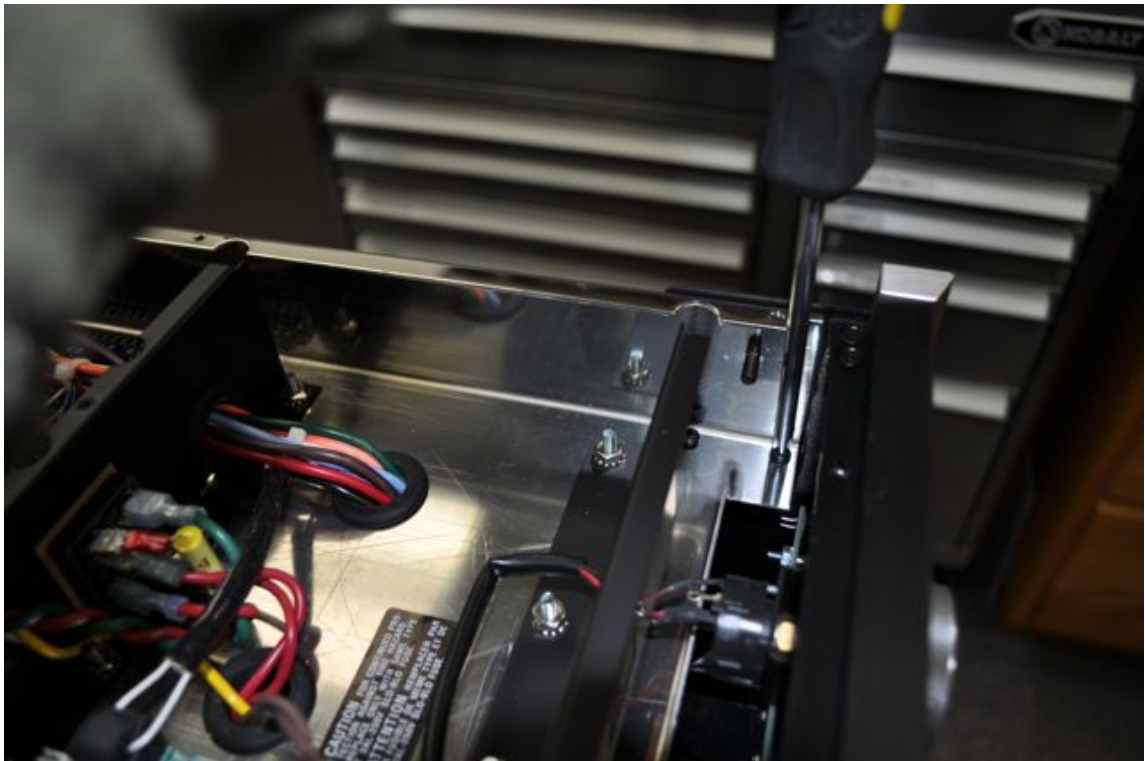



Remove 4 screws total
Lift off shroud.

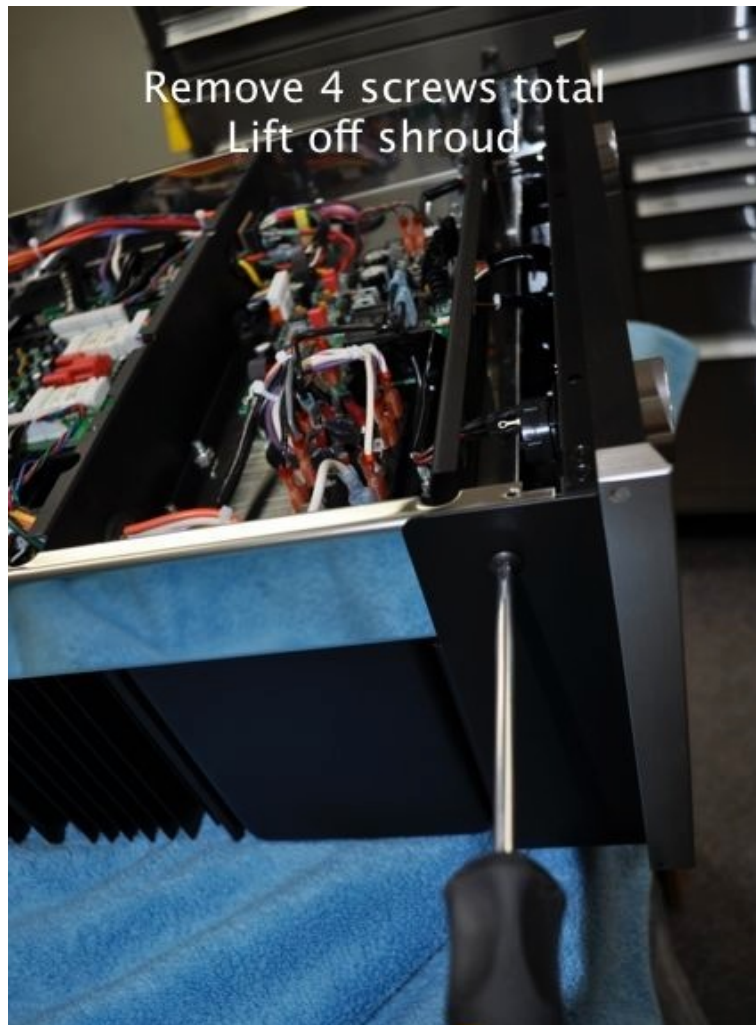


Disconnect these white connectors

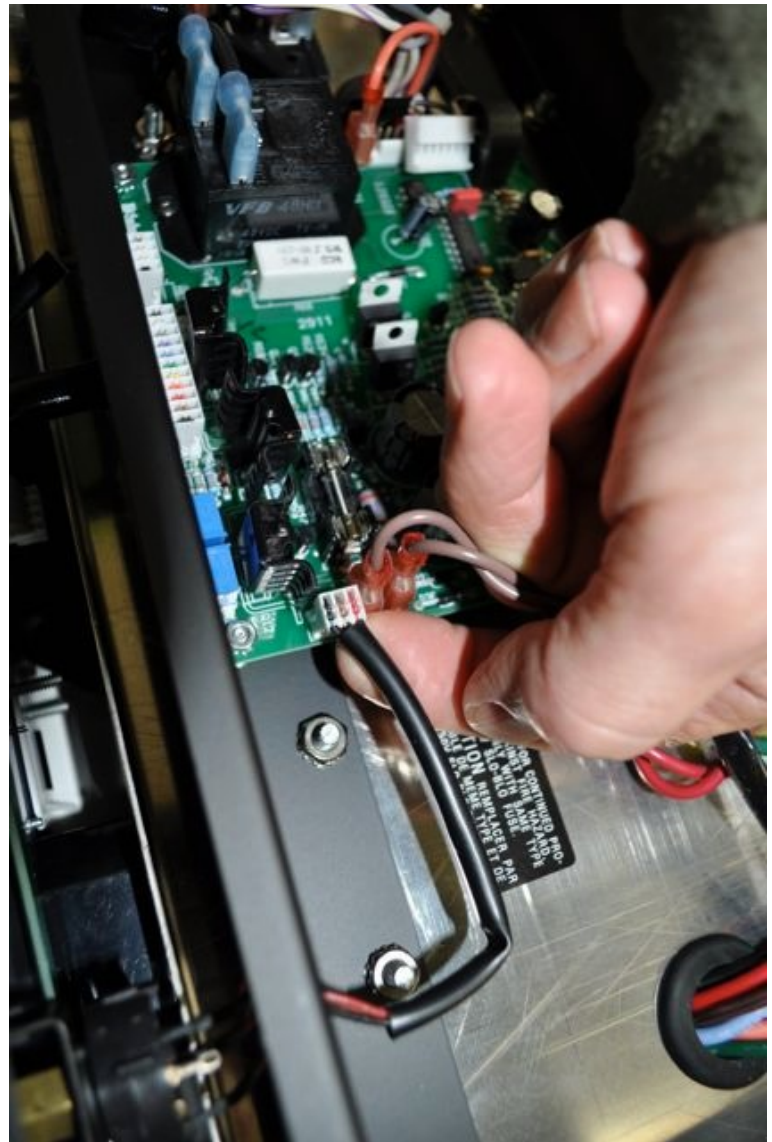
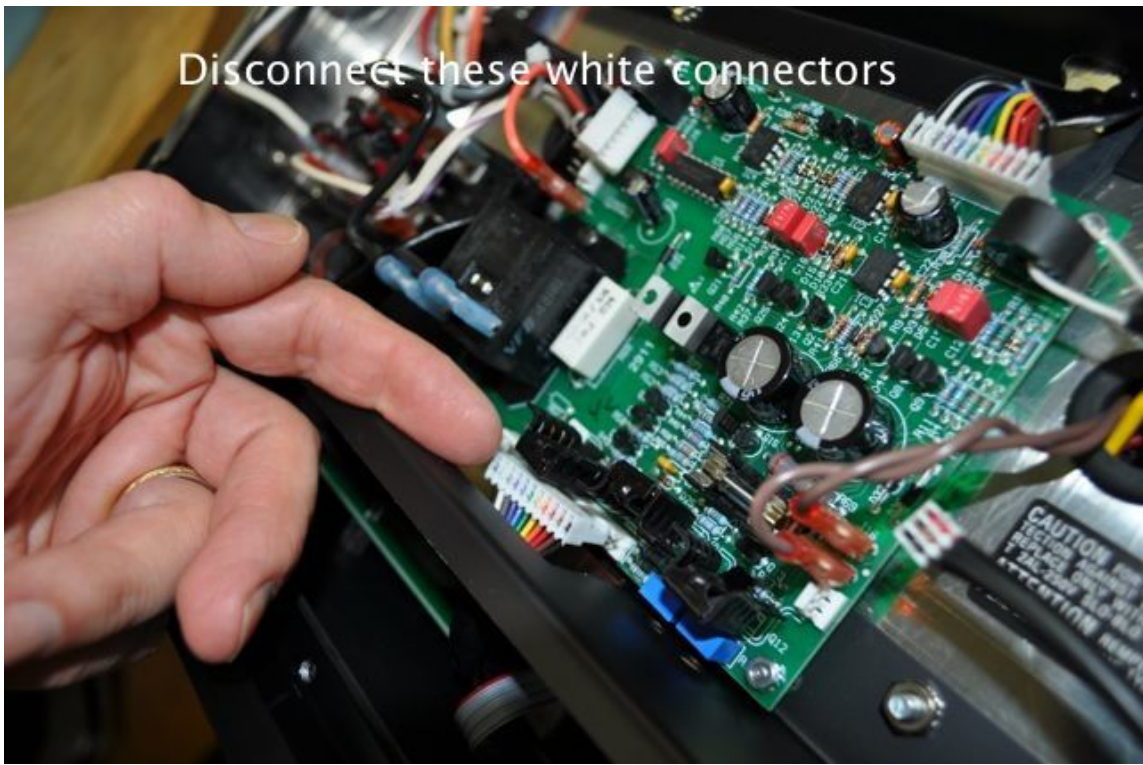


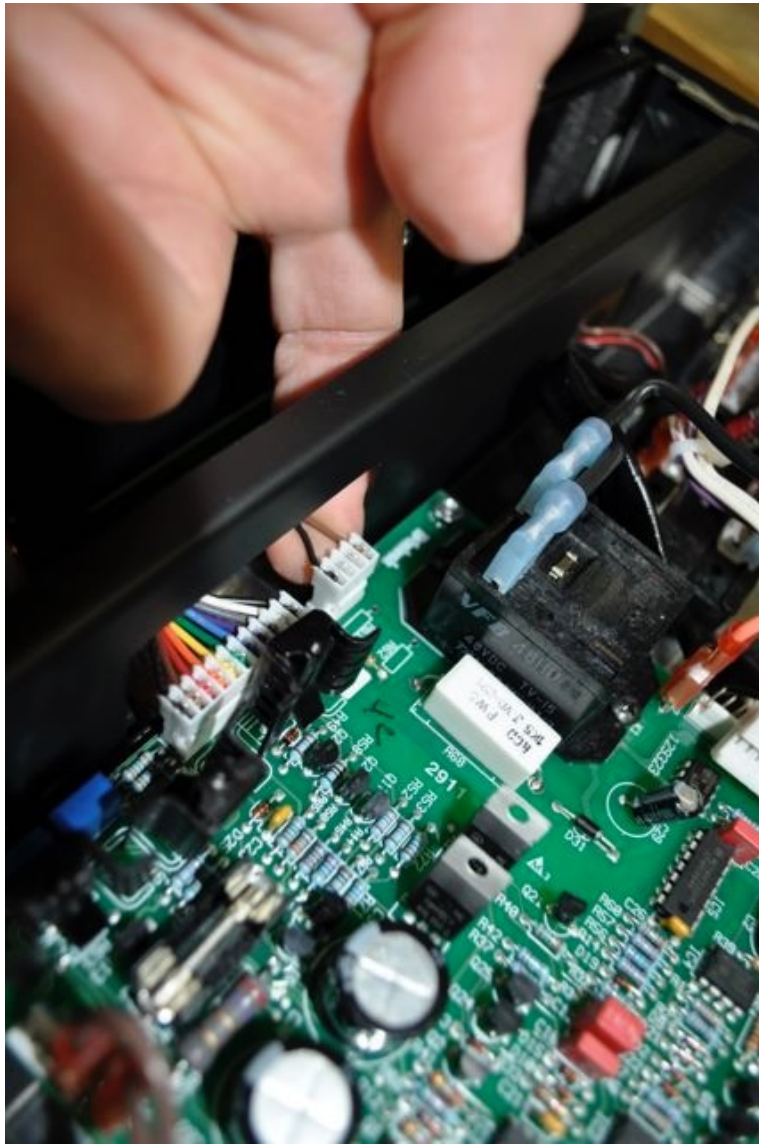


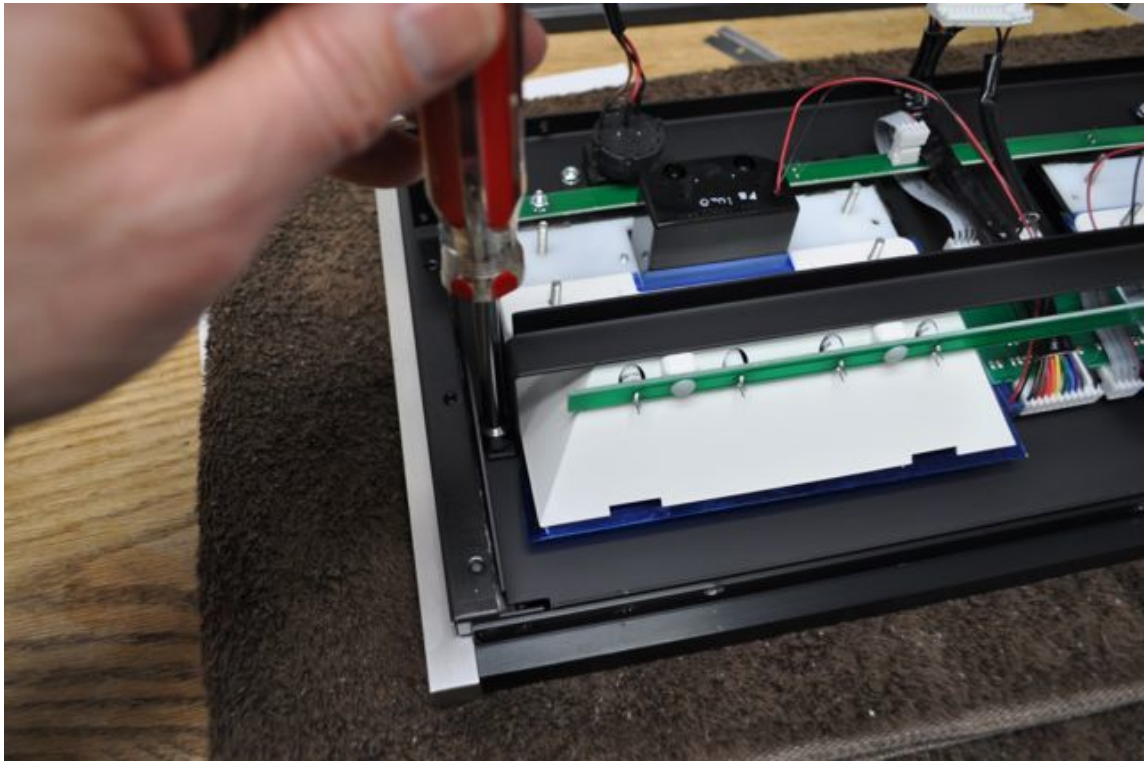


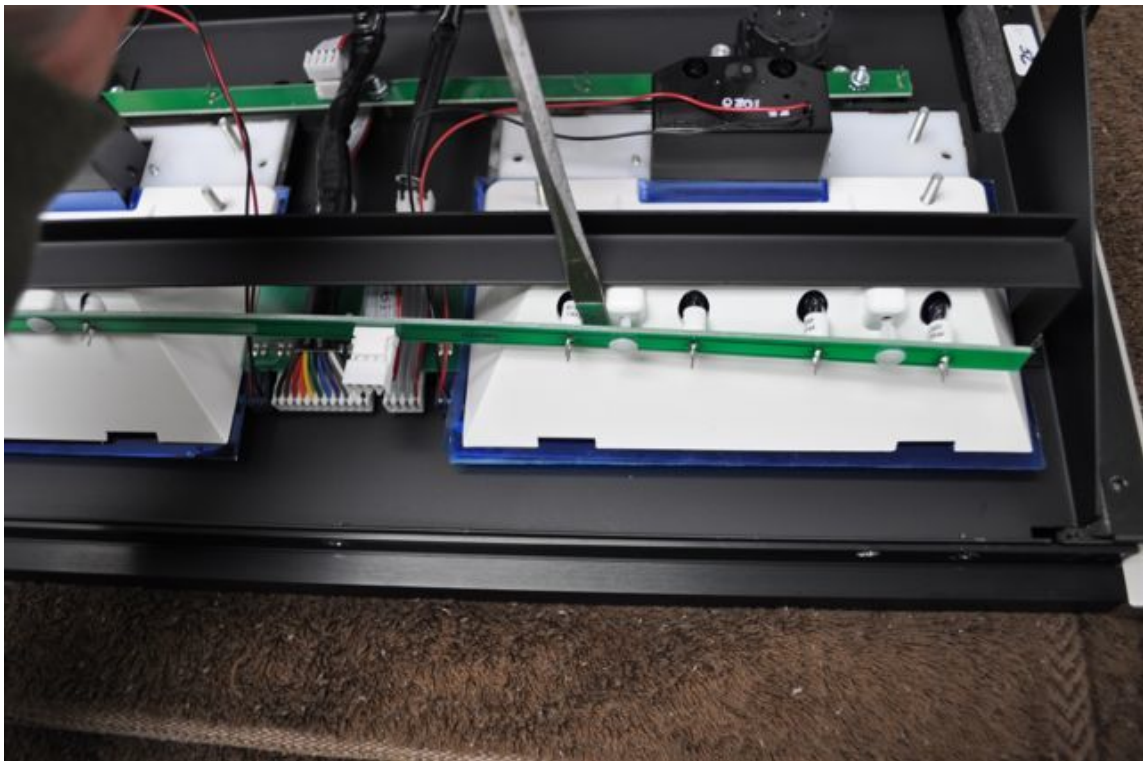



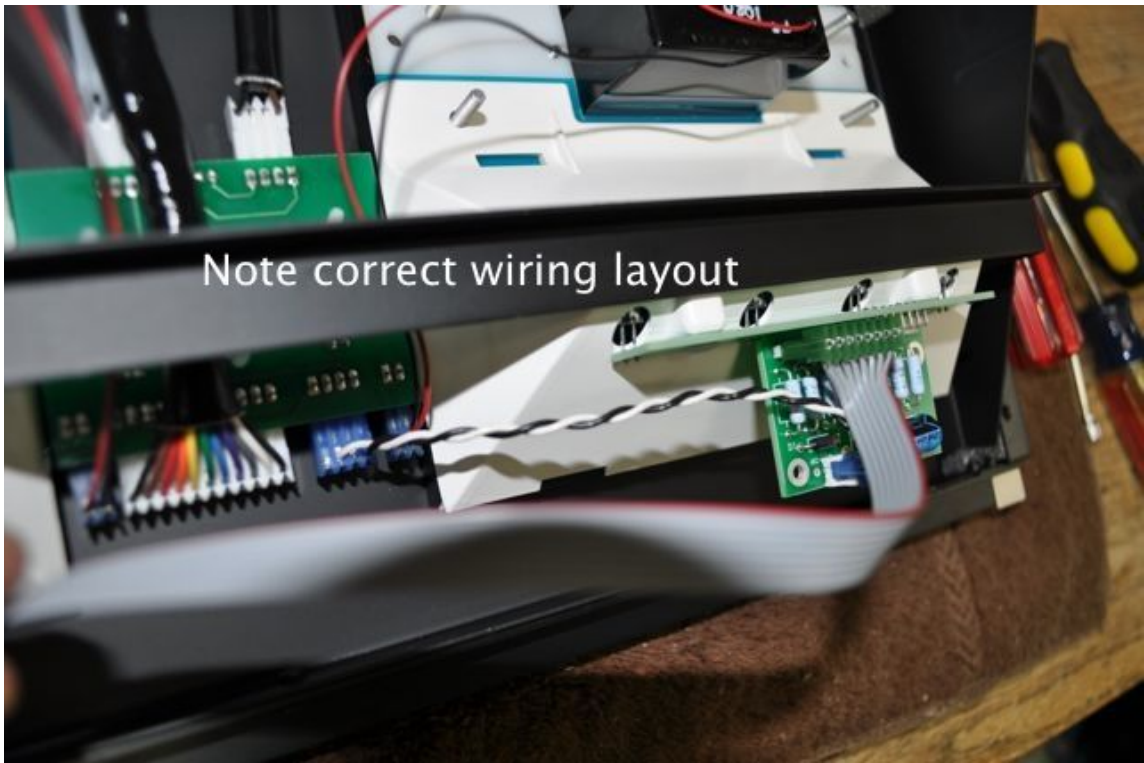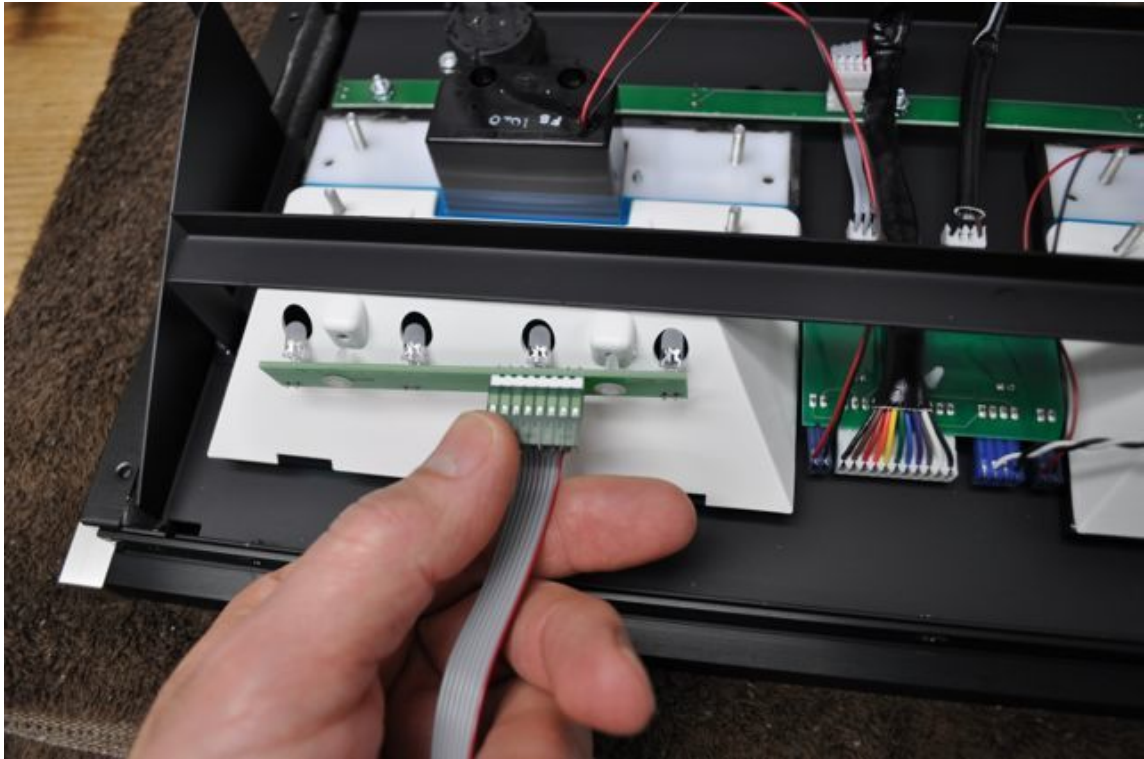

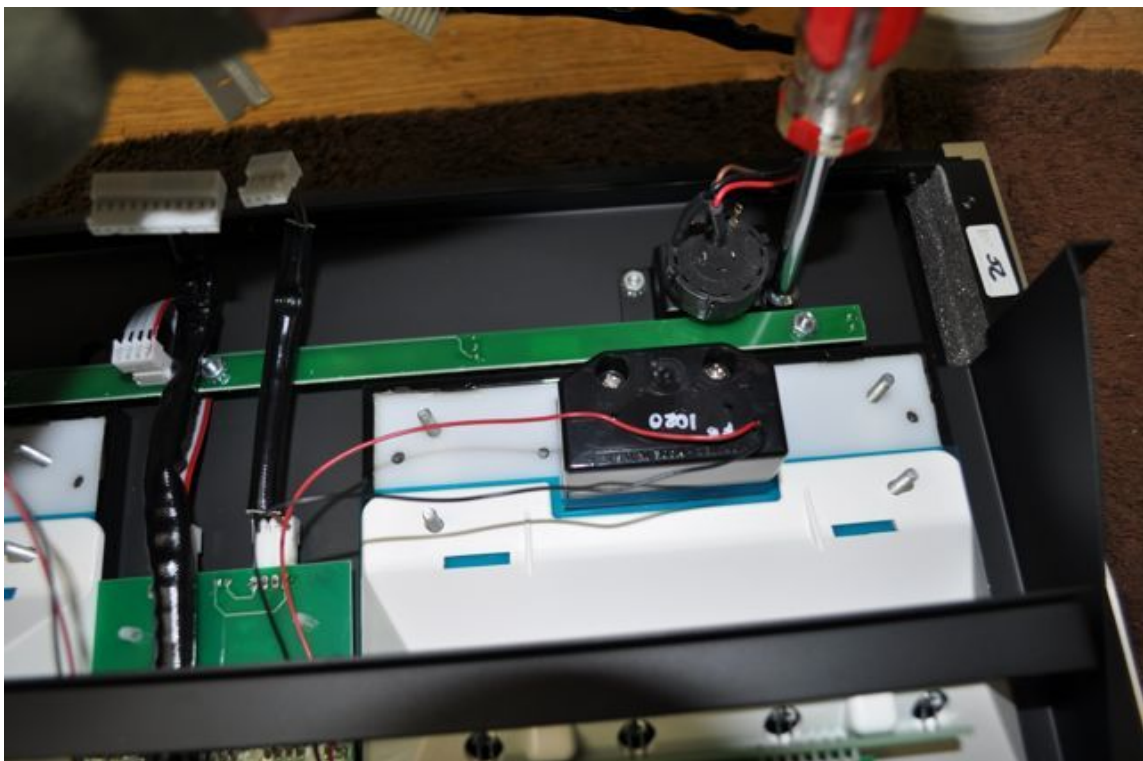

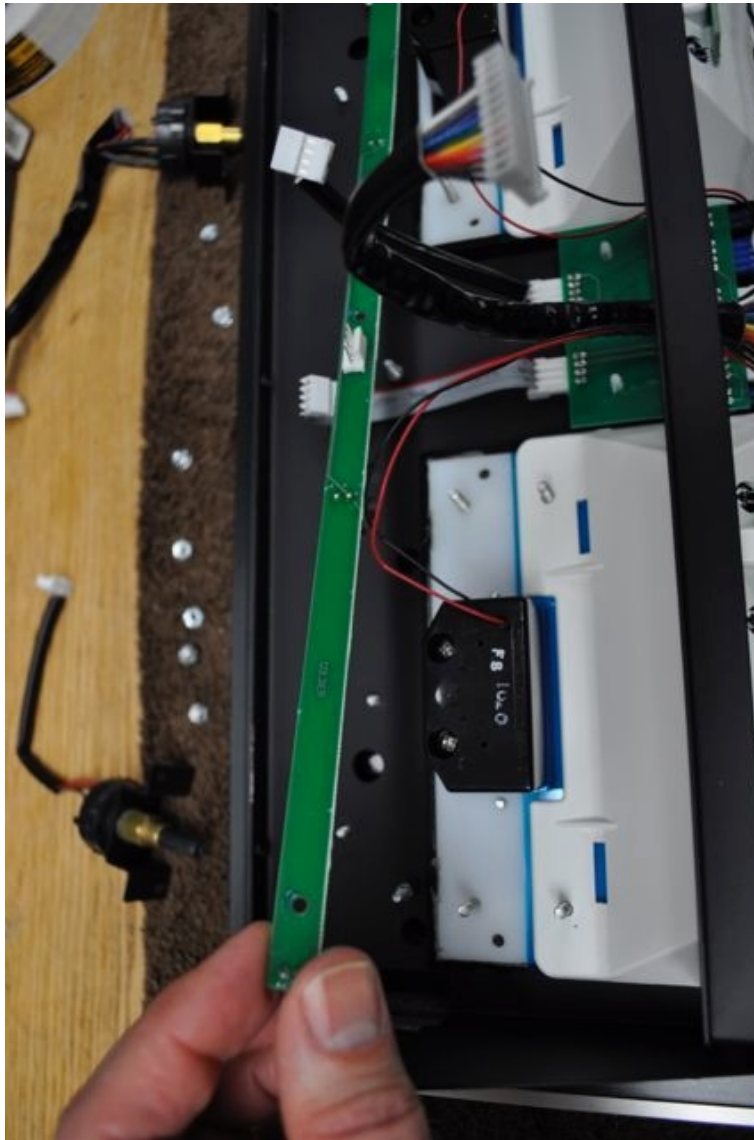

Small fiber washers MUST be installed on each of the 3 studs to insure electrical isolation



Discard or better yet Recycle



Finished layout for MC352 LED
Audio Classics Ltd Vestal NY 13850
Questions? 607-766-3501

